



Firmware Instructions

3.5" CABD3B BULLDOG

INSTALLATION STEPS



1 STEP 1: Download the firmware .zip - file associated with the 3.5" Cavalry Bulldog.

2 STEP 2: Once the firmware is downloaded, un-zip the file contents onto your desktop. Make sure you see 2 folders:

"101007_00_00_00" and "MPTools_1.07.1v".


3 STEP 3: Plug in your 3.5" Cavalry Bulldog to a power source with the packaged power supply. Connect the Bulldog into your computer via USB 2.0 or 3.0 cable and allow your computer to detect the device.

Unplug any other external devices that are currently plugged into the same computer, aside from the product you are updating.

4 STEP 4: Open the "MPTools_1.07.1v" folder and locate the "MPTool" file.

Right-click and select "Run as Administrator."


Allow this program to make changes to your computer.

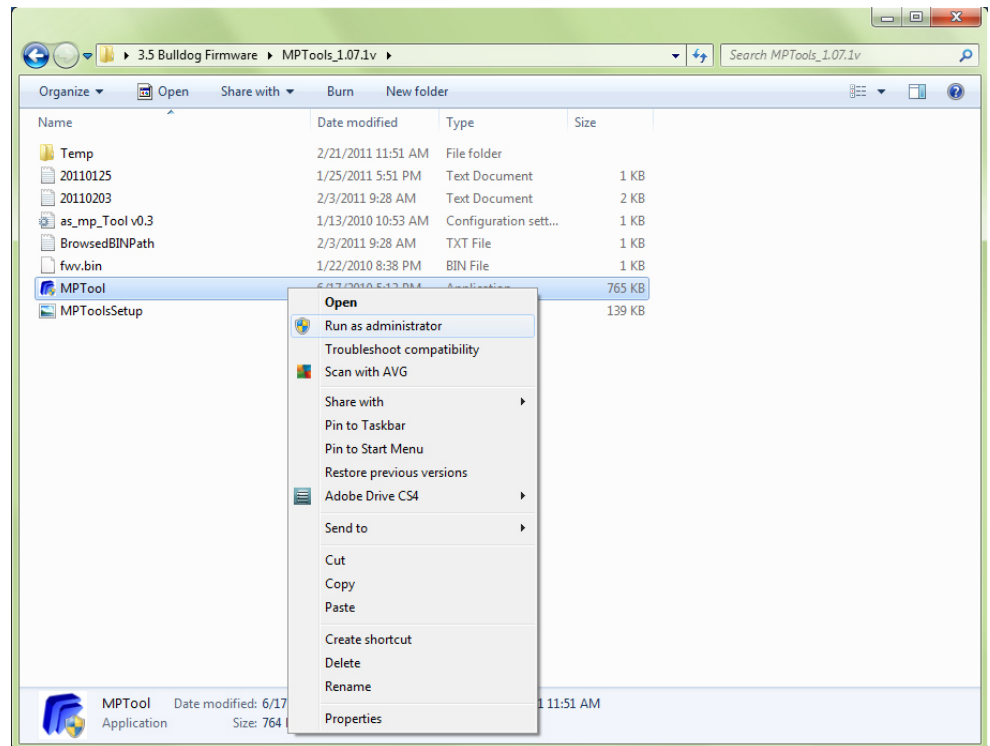

3.5" BULLDOG FIRMWARE INSTRUCTIONS

7

STEP 7: Next, select the “FW Browse” button and search for the firmware folder [3.5 Bulldog Firmware] that you have placed on your Desktop. Select the folder and locate the subfolder entitled “101007_00_00_00.”

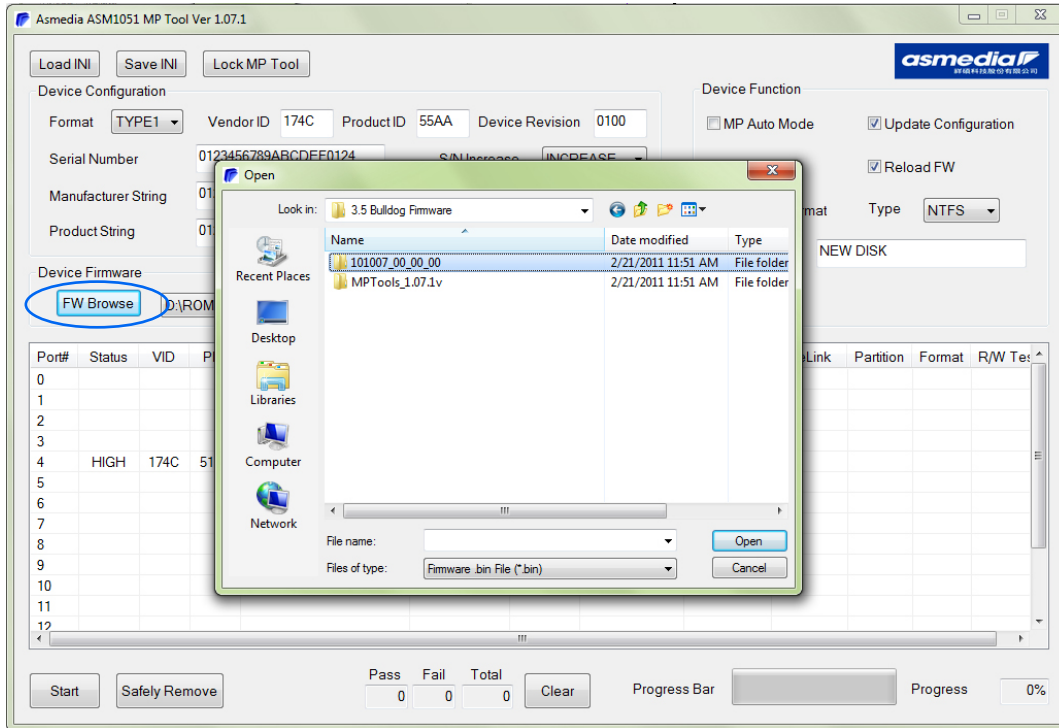

8

STEP 8: Double click to open the folder “101007_00_00_00.” Select the “101007_00_00_00.bin” file and click “open.” Your firmware will now be selected. Under Device Function to the top right, deselect Partition/Format and W/R Test.

